



Typical ProLine Drain Installation Details

Note: Set all Quick Slope on structurally sound, flat sub-floor with fast-setting, self-curing thinset.
 Set the drain body level. Do not follow sub-floor if it is out of level.
 Do not grout in cover. Cover must remain removable for maintenance.

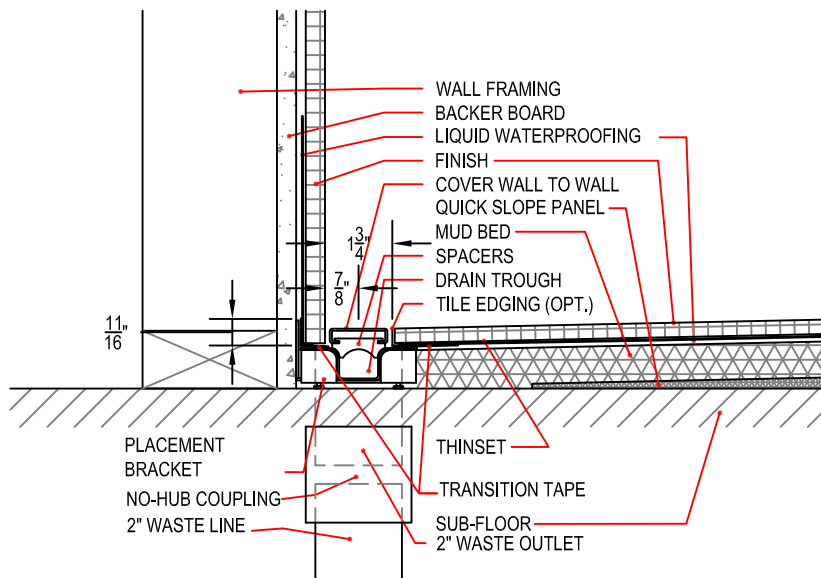


A PROLINE DRAIN SET AT WALL ABOVE SUB-FLOOR


0" 1" 3" 6" 12"

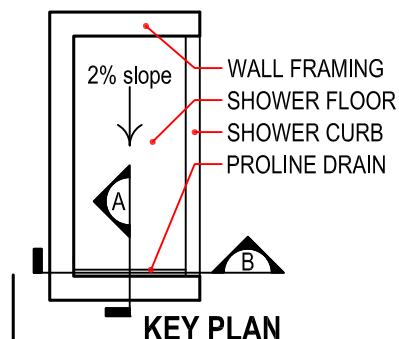

KEY PLAN

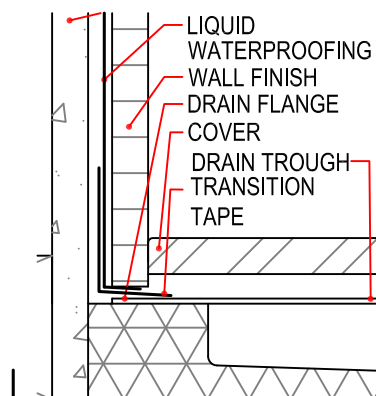

DRAIN END DETAIL

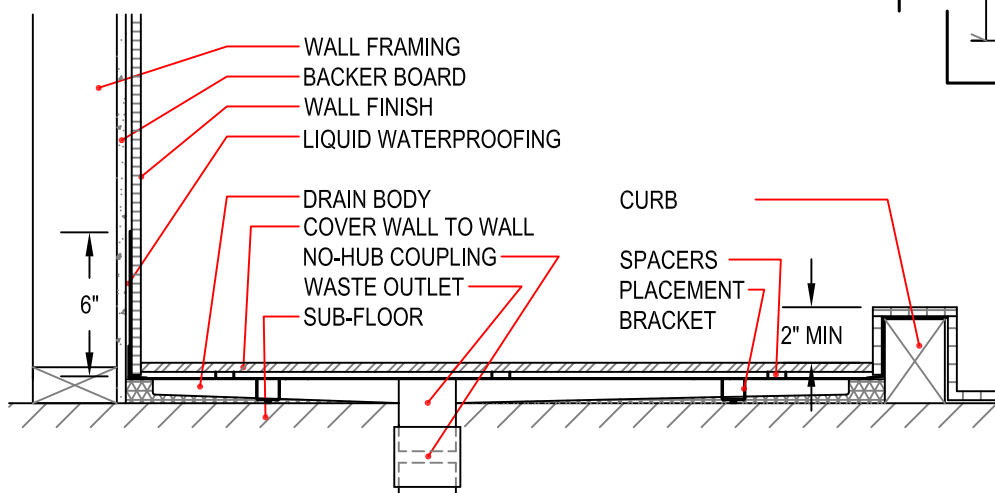

B DRAIN SET ABOVE SUB-FLOOR

0" 1" 3" 6" 12"