


**Side (Horizontal) Waste Outlet
Drain Installation Using ShowerLine Pan
with Sheet Waterproofing**

SHOWERLINE drain

by **QUICKDRAIN** USA

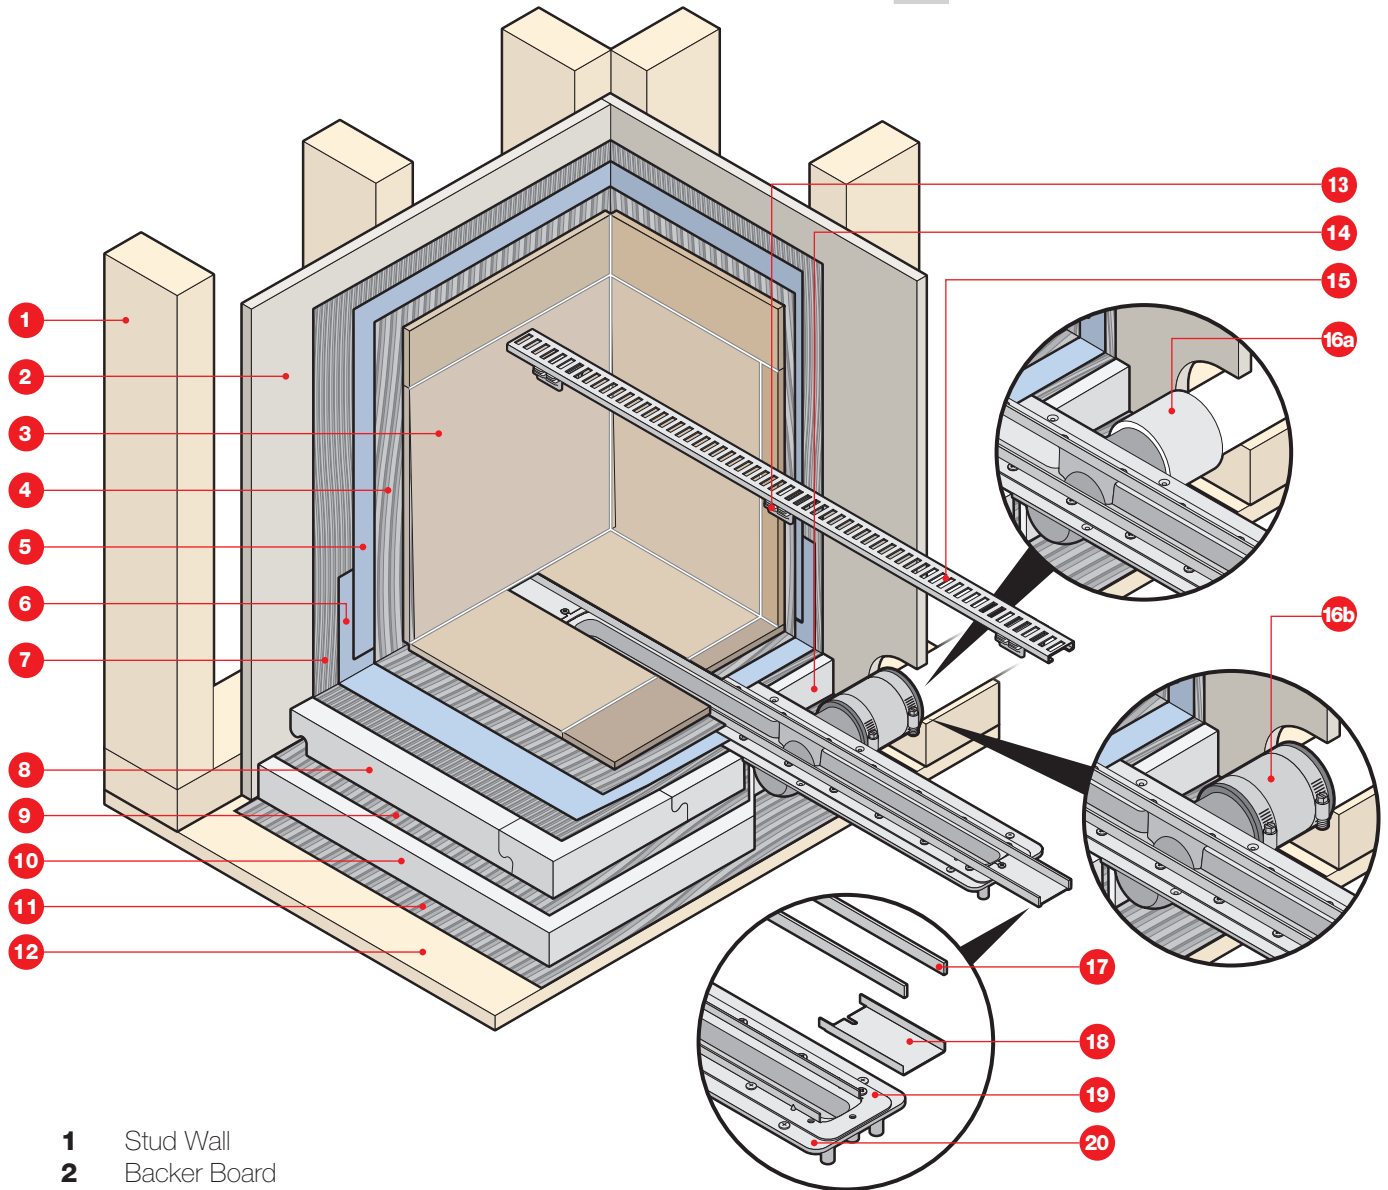

- 1** Stud Wall
- 2** Backer Board
- 3** Wall tile and Grout
- 4** Thin-set (for wall tile)
- 5** Sheet Wall Waterproofing
- 6** Sheet Shower Pan Waterproofing
- 7** Thin-set
- 8** Pre-sloped Interlocking PET Foam Panels
- 9** Thin-set
- 10** Flat Foam Panel
- 11** Thin-set
- 12** Sub-floor

- 13** Height Adjustable Spacer
- 14** Pre-sloped Interlocking Drain Support Frame
- 15** Drain Cover
- 16a** PVC to PVC connection
- 16b** Shielded No-Hub Coupling
- 17** Cover Chanel
- 18** Trough Extension
- 19** Clamping Collar
- 20** Drain Body